



—
INSTALLATION INSTRUCTION

Fourth pole

OTP_60FD

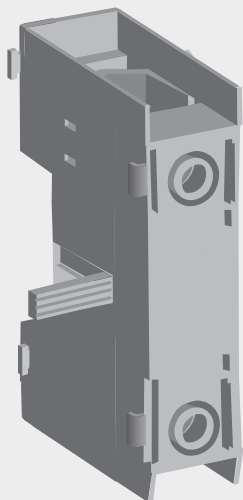

OTP_60FD

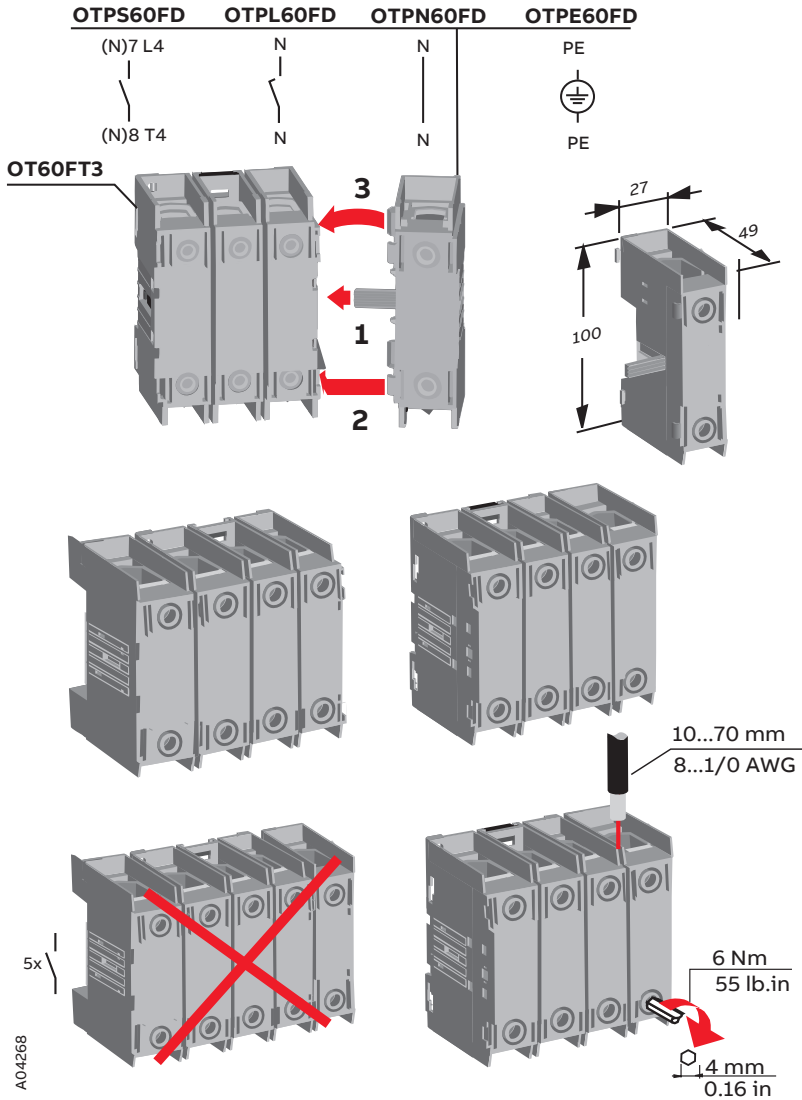



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage